Model #L-GZ800PST

USE AND CARE GUIDE

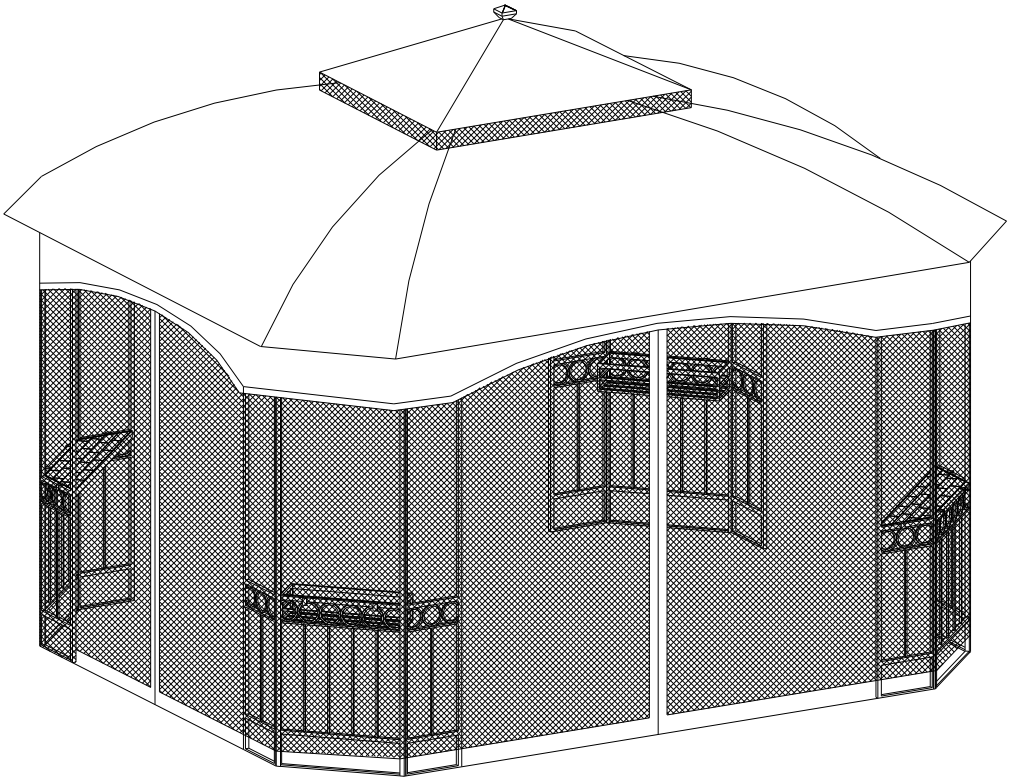

Table of Contents

Table of Contents 2
Safety Information 2
Warranty 2
What is Covered 2
What is Not Covered 2
Pre-Assembly 3-5
Planning Assembly 3
Hardware Included 3
Package Contents 5
Assembly 6-9
Care and Cleaning 10

Safety Information

1. Some parts may contain sharp edges. Wear protective gloves.
2. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and usage.

DANGER: This unit is heavy! Do not assemble this item alone.

WARNING: Do not leave the gazebo where there is a risk of high wind, as possible damage will occur to the structure.

CAUTION: Do not climb on top of the gazebo. Falling off the gazebo can result in serious injury, possibly even death.

NOTICE: For outdoor use only.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 1 year.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

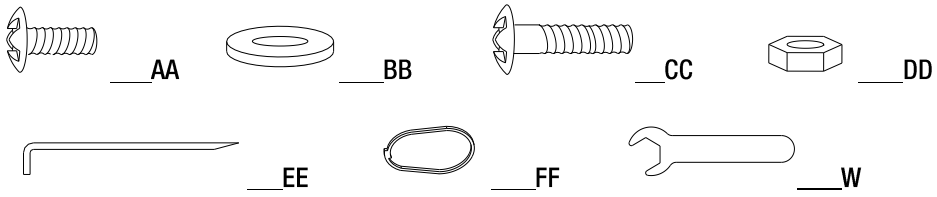

Part	Description	Quantity
AA	M6 X20 Bolt	32
BB	M6 Flat washer	40
CC	M6 X 35 Screw	4
DD	M6 Nut	4
EE	Dia. 6 X 180 Stake	12
FF	Ring	52
W	Wrench	1

Pre-Assembly (continued)

PACKAGE CONTENTS



__A

__B

__C

__D

__E



__F

__G

__H

__I

__J

__K



__L



__M

__N



__O

__P

__Q

__R



__S



__T



__U

Pre-Assembly (continued)

Part	Description	Quantity
A	Screen	4
B	Left screen	4
C	Right screen	4
D	Long beam	2
E	Short beam	2
F	Lower tube	8
G	Long slide beam	4
H	Short slide beam	4
I	Long middle beam	2
J	Short middle beam	2
K	Upper tube	4
L	Big connector	1
M	Small slide beam	4
N	Small connector	1
O	Hook	1
P	Finial	1
Q	Small canopy	1
R	Big canopy	1
S	Mosquito netting	1
T	Basket	2
U	Slate shelf	2

Assembly

1 Connecting the screens and left/right screens

□ Insert the left screen (B) to the screen (A), then pull down the left screen (B) to make the two on the horizontal line. Secure together using bolts (AA) and flat washers (BB). Repeat this step for the right screen (C) and screen (A).

NOTE: To avoid destroying the finish, please handle it with care.

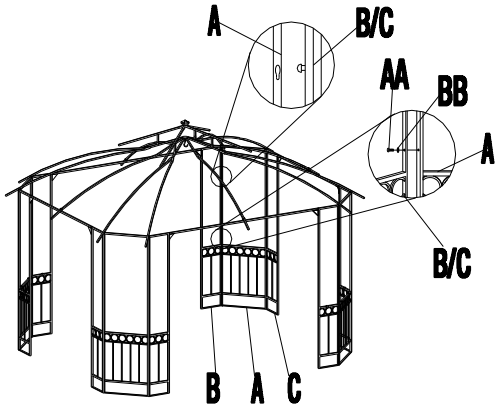

2 Attaching the beams

□ Use the bolts (AA) and flat washers (BB) to secure the long beams (D) to the small screens (B&C). Repeat for the short beams (E).

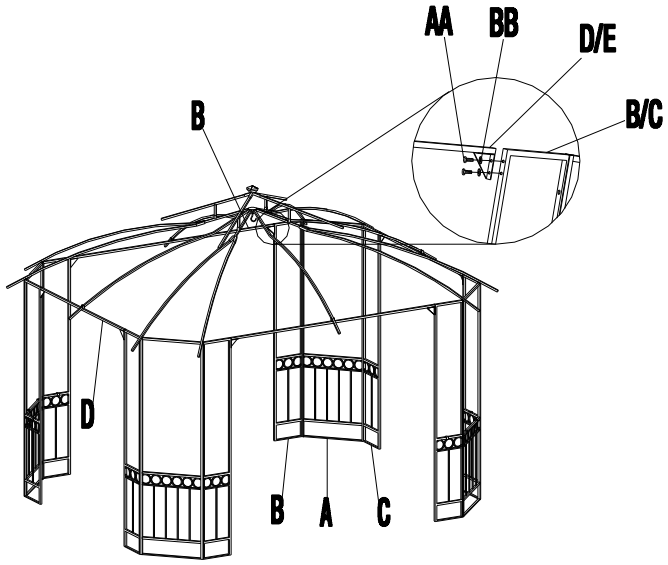

3 Connecting the upper tubes to the big connector

□ Attach the hook (O) to the big connector (L). Insert the upper tubes (K) into the big connector (L).

NOTE: To avoid destroying the finish, please handle it with care.

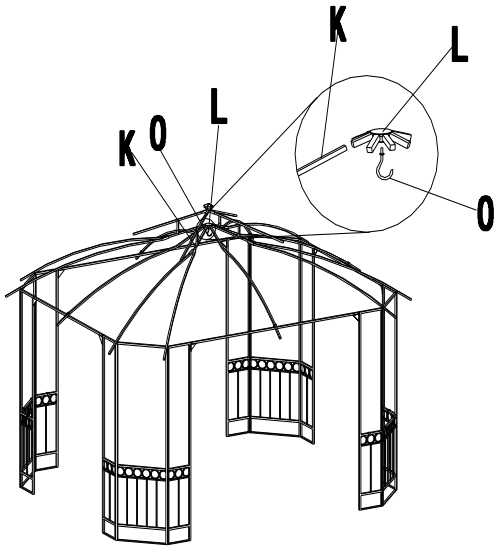

4 Attaching the slide beams to the upper tubes

□ Insert the long slide beams (G) and short slide beams (H) into the upper tubes (K).

NOTE: To avoid destroying the finish, please handle it with care.

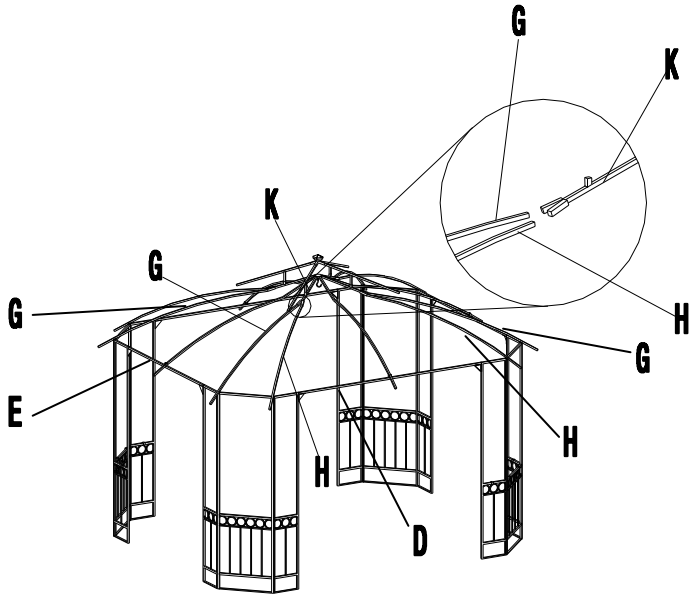

Assembly (continued)

5 Attaching the slide beams to the lower tubes

□ Insert the long slide beams (G) and short slide beams (H) into the lower tubes (F).

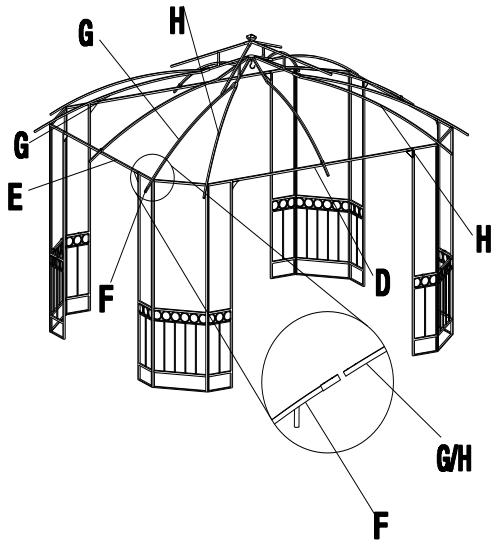

6 Connecting the lower tubes to the screens

□ Insert the lower tubes (F) into the screens (A).

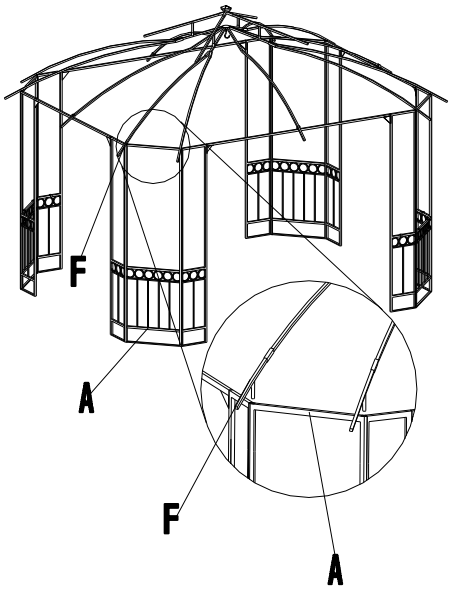

7 Attaching the middle beams to the big connector

□ Insert the long middle beams (I) and short middle beams (J) to the big connector (L).

NOTE: To avoid destroying the finish, please handle it with care.

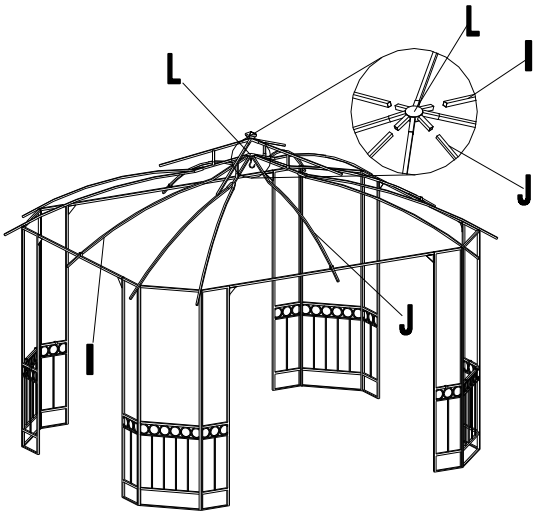

8 Attaching the middle beams to the beams

□ Secure the long middle beams (I) and short middle beams (J) to the short beams (E) and long beams (D) by using screws (CC), flat washers (BB) and nuts (DD).

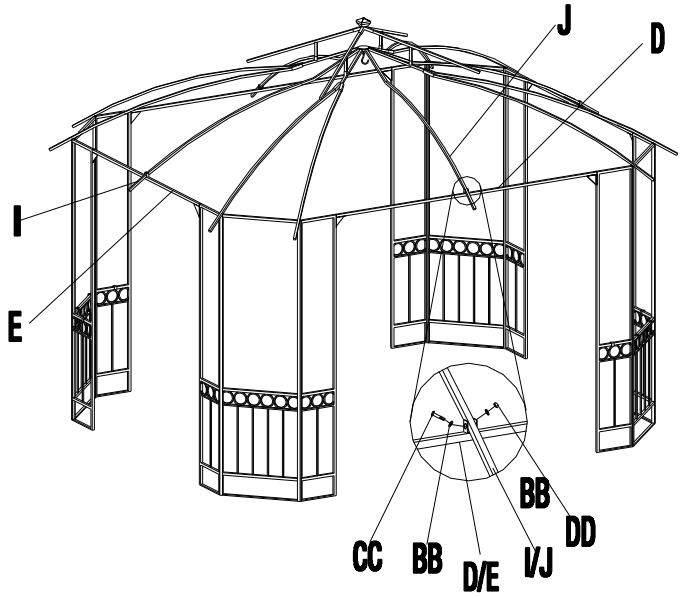

Assembly (continued)

9 Connecting the small slide beams to the small connectors

□ Insert the small slide beams (M) into the small connector (N).

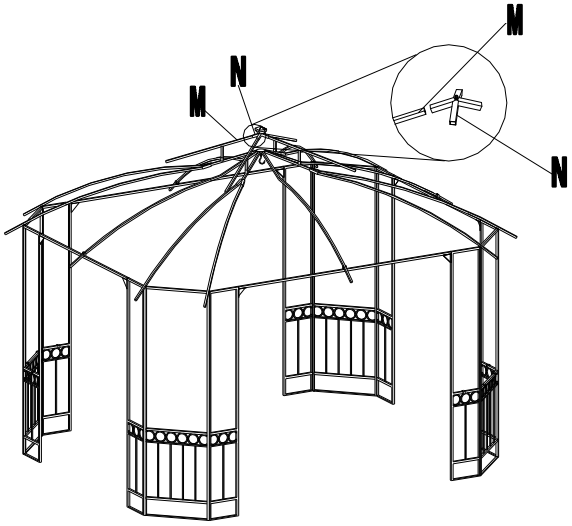

10 Attaching the small canopy and finial

□ Attach the small canopy (Q) to the small top and secure the four corners. Assemble the finial (P) to the small connector (N).

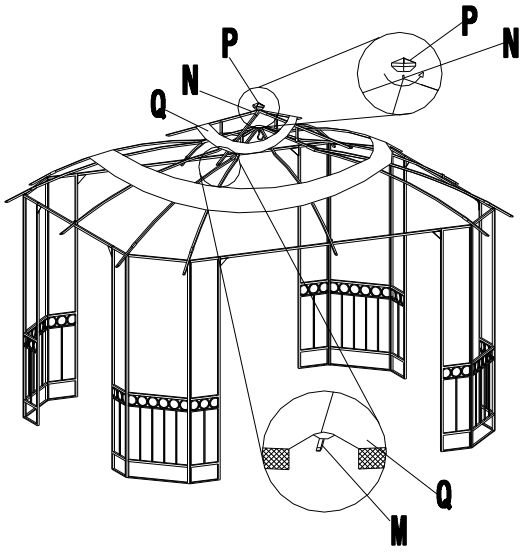

11 Attaching the small top to the frame

□ Attach the big canopy (R) to the top but do not unfold. Insert the assembled small top to the big connector (K).

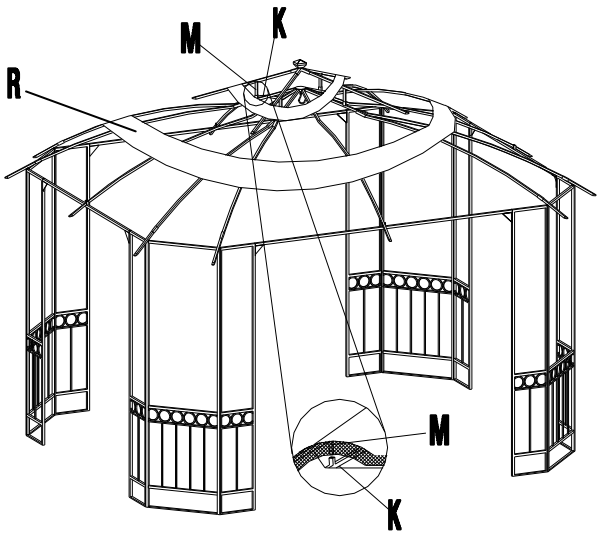

12 Unfolding the big canopy

□ Unfold the big canopy (R).

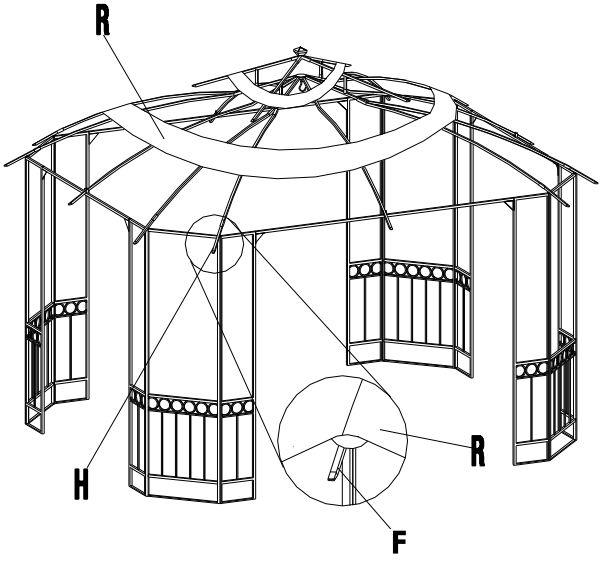

Assembly (continued)

13 Attaching the mosquito netting

□ Use the rings (FF) to attach the mosquito netting (S).

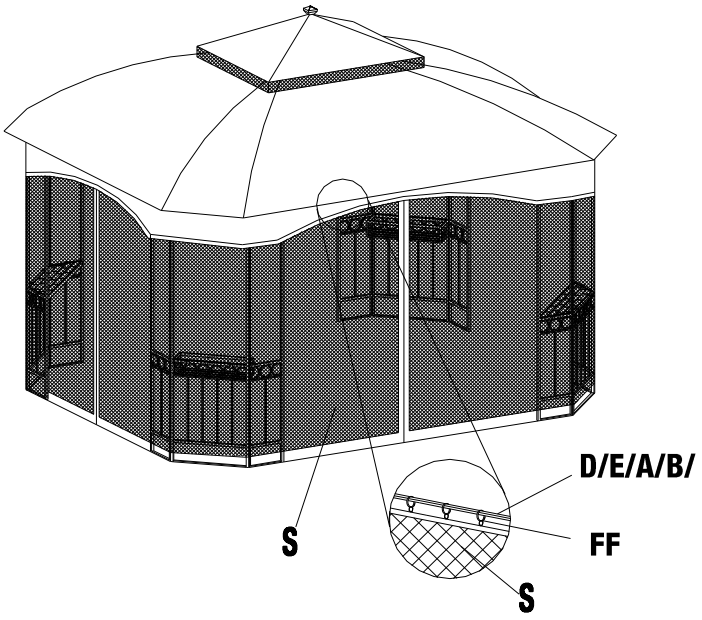

14 Attaching the basket

□ Attach the basket (T) to the tube of the screen (A).

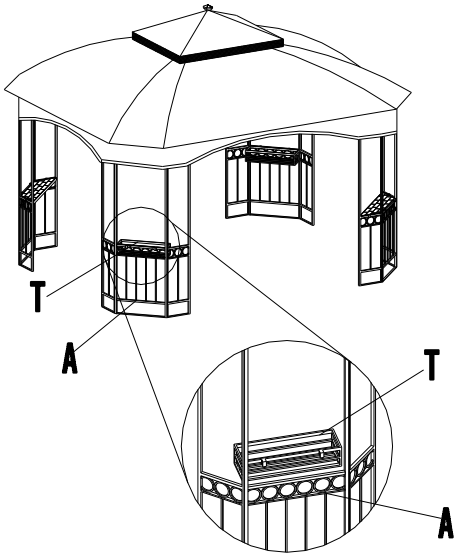

15 Attaching the slate shelf

□ Attach the slate shelf (U) to the tube of the screen (A).

NOTE: To avoid destroying the finish, please handle it with care.

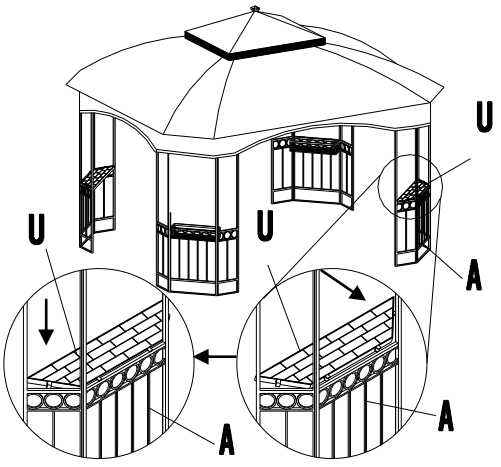

16 Securing the gazebo to the ground

□ Use stakes (EE) to secure the gazebo to the ground.

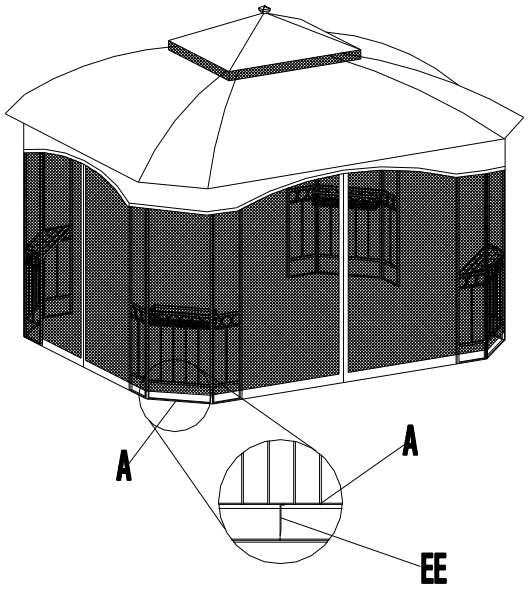

IMPORTANT:

1. Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of gazebo construction.

2. The area for assembly should not be less than 6 feet from any obstruction such as fence, garage, house, overhanging branches, laundry line or electrical wires.

3. This unit is heavy. Do not assemble this item alone. Six people are recommended for safe assembly.

4. Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.

5. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and use.

6. For outdoor use only. Install on level ground. Stakes are provided to secure the gazebo in grass ground. If you wish to secure the gazebo to a wood deck or concrete surface, you will need to purchase fasteners appropriate for these surfaces. These are readily available at your local hardware store or home center.

7. Check all bolts for tightness before and during usage.

8. While this gazebo is manufactured to withstand gale force winds utilizing only the supplied ground stakes, in areas subject to frequent severe weather, securing the gazebo to a deck, concrete patio or footings should be considered.

Maintenance:
Our iron/steel components for garden accessories and patio items are coated with rust inhibiting paint that protects it from rusting. However, due to the nature of iron, surface oxidation (rusting) will occur once these protective coatings are scratched. This is a natural process and is not a defect! To minimize this condition, we recommend care when assembling & handling the product to prevent scratching the paint. Should any scratching or damage occur, we recommend immediate touch-up with rust inhibiting paint. Surface rust can also be easily removed with a very light application of common cooking oil. If surface oxidation (rusting) occurs and if no measure is taken to prevent this, the oxidation may start dripping on to deck or patio and cause damaging stains, which may be difficult to remove. This can be prevented if measure is taken to keep the product from oxidizing.

IMPORTANT - Please do not return this product to the store.
Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual for future reference.

For technical assistance on assembly or replacement parts, call Sunjoy Industries at 1-866-578-6569 from 8:30AM to 5:30PM EST, or email us at customer.care@sunjoydirect.com, or visit www.sunjoydirect.com for assistance.

Made in China